

Parameterisable damper actuator  
for adjusting dampers in technical  
building installations

- Air damper size up to approx. 1.5 m<sup>2</sup>
- Nominal torque 8 Nm
- Nominal voltage AC/DC 24 V
- Control Modulating DC (0)2...10 V  
Variable
- Position feedback DC 2...10 V  
Variable
- Running time motor 4 s Variable



### Technical data

Electrical data	Nominal voltage	AC/DC 24 V
Nominal voltage frequency	50/60 Hz	
Nominal voltage range	AC 19.2...28.8 V / DC 21.6...28.8 V	
Power consumption in operation	13 W	
Power consumption in rest position	2 W	
Power consumption for wire sizing	23 VA	
Power consumption for wire sizing note	I <sub>max</sub> 20 A @ 5 ms	
Connection supply / control	Cable 1 m, 4 x 0.75 mm <sup>2</sup>	
Parallel operation	Yes (note the performance data)	
Functional data	Torque motor	Min. 8 Nm
Torque variable	25%, 50%, 75% reduced	
Positioning signal Y	DC 0...10 V	
Positioning signal Y note	Input impedance 100 kΩ	
Control signal Y variable	Open-close Modulating (DC 0...32 V)	
Operating range Y	DC 2...10 V	
Operating range Y variable	Start point DC 0.5...30 V End point DC 2.5...32 V	
Position feedback U	DC 2...10 V	
Position feedback U note	Max. 0.5 mA	
Position feedback U variable	Start point DC 0.5...8 V End point DC 2.5...10 V	
Position accuracy	±5%	
Direction of motion motor	Selectable with switch 0 / 1	
Direction of motion note	Y = 0 V: At switch position 0 (ccw rotation) / 1 (cw rotation)	
Direction of motion variable	Electronically reversible	
Manual override	Gear disengagement with push-button, can be locked	
Angle of rotation	Max. 95°	
Angle of rotation note	can be limited on both sides with adjustable mechanical end stops	
Minimum angle of rotation	Min. 30°	
Running time motor	4 s / 90°	
Motor running time variable	4...20 s	
Adaption setting range	manual (automatic on first power-up)	
Adaption setting range variable	No action Adaption when switched on Adaption after pushing the gear disengagement button	
Override control	MAX (maximum position) = 100% MIN (minimum position) = 0% ZS (intermediate position, AC only) = 50%	
Override control variable	MAX = (MIN + 32%)...100% MIN = 0%...(MAX - 32%) ZS = MIN...MAX	
Sound power level motor	56 dB(A)	
Spindle driver	Universal spindle clamp reversible 8...26.7 mm	
Position indication	Mechanically, pluggable	

## Technical data

<b>Safety</b>	Protection class IEC/EN	III Safety extra-low voltage
	Protection class UL	UL Class 2 Supply
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2, UL Enclosure Type 2
	EMC	CE according to 2004/108/EC
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	Certification UL	cULus according to UL 60730-1A, UL 60730-2-14 and CAN/CSA E60730-1:02
	Mode of operation	Type 1
	Rated impulse voltage supply / control	0.8 kV
	Control pollution degree	3
	Ambient temperature	-30...40 °C
	Ambient temperature note	Caution: +40...+50 °C utilisation possible only under certain restrictions. Please contact your supplier.
	Non-operating temperature	-40...80 °C
	Ambient humidity	95% r.h., non-condensing
	Maintenance	Maintenance-free
<b>Weight</b>	Weight	1.1 kg

## Safety notes




- The device must not be used outside the specified field of application, especially not in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea)water, snow, ice, insolation or aggressive gases interfere directly with the actuator and that is ensured that the ambient conditions remain at any time within the thresholds according to the data sheet.
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- Cables must not be removed from the device.
- Self adaption is necessary when the system is commissioned and after each adjustment of the angle of rotation (press the adaption push-button once).
- To calculate the torque required, the specifications supplied by the damper manufacturers concerning the cross-section, the design, the installation site and the ventilation conditions must be observed.
- The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.

## Product features

<b>Mode of operation</b>	The actuator is connected with a standard modulating signal of DC 0...10V and drives to the position defined by the positioning signal. Measuring voltage U serves for the electrical display of the damper position 0...100% and as slave control signal for other actuators.
<b>Parameterisable actuators</b>	The factory settings cover the most common applications. Single parameters can be modified with the Belimo Service Tools MFT-P or ZTH EU.
<b>Simple direct mounting</b>	Simple direct mounting on the damper spindle with an universal spindle clamp, supplied with an anti-rotation device to prevent the actuator from rotating.
<b>Manual override</b>	Manual override with push-button possible (the gear is disengaged for as long as the button is pressed or remains locked).
<b>High functional reliability</b>	The actuator is overload protected, requires no limit switches in intermediate positions and automatically stops when the end stop is reached (at rest).
<b>Adjustable angle of rotation</b>	Adjustable angle of rotation with mechanical end stops. A minimum permissible angle of rotation of 30° must be allowed for.

**Product features**

<b>Home position</b>	The first time the supply voltage is switched on, i.e. at the time of commissioning, the actuator carries out an adaption, which is when the operating range and position feedback adjust themselves to the mechanical setting range. The detection of the mechanical end stops enables a gentle approach to the end positions, thus protecting the actuator mechanics. The actuator then moves into the position defined by the positioning signal.
----------------------	--

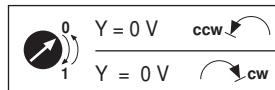**Adaption and synchronisation**

An adaption can be triggered manually by pressing the "Adaption" button or with the PC-Tool. Both mechanical end stops are detected during the adaption (entire setting range).  
Automatic synchronisation after pressing the gearbox disengagement button is configured. The synchronisation is in the home position (0%).  
The actuator then moves into the position defined by the positioning signal.  
A range of settings can be adapted using the PC-Tool (see MFT-P documentation)

**Accessories**

	<b>Description</b>	<b>Type</b>
<b>Electrical accessories</b>		
Auxiliary switch, add-on, 1 x SPDT	S1A	
Auxiliary switch, add-on, 2 x SPDT	S2A	
Auxiliary switch, add-on, 2 x SPDT, grey	S2A GR	
Auxiliary switch and feedback pot. Adapter	Z-SPA	
Feedback potentiometer 140 Ohm, add-on	P140A	
Feedback potentiometer 140 Ohm, add-on, grey	P140A GR	
Feedback potentiometer 200 Ohm, add-on	P200A	
Feedback potentiometer 500 Ohm, add-on	P500A	
Feedback potentiometer 500 Ohm, add-on, grey	P500A GR	
Feedback potentiometer 1 kOhm, add-on	P1000A	
Feedback potentiometer 2.8 kOhm, add-on	P2800A	
Feedback potentiometer 2.8 kOhm, add-on, grey	P2800A GR	
Feedback potentiometer 1 kOhm, add-on, grey	P1000A GR	
Feedback potentiometer 5 kOhm, add-on	P5000A	
Feedback potentiometer 5 kOhm, add-on, grey	P5000A GR	
Feedback potentiometer 10 kOhm, add-on	P10000A	
Feedback potentiometer 10 kOhm, add-on, grey	P10000A GR	
Signal converter voltage/current, supply AC/DC 24V	Z-UIC	
Digital position indicator for front-panel mounting, 0...99%, front mass 72 x 72 mm	ZAD24	
Range controller for wall mounting, adjustable electron. Min./max. angle of rotation limitation	SBG24	
Positioner for wall mounting, range 0...100%	SGA24	
Positioner in a conduit box, range 0...100%	SGE24	
Positioner for front-panel mounting, range 0...100%	SGF24	
Positioner for wall mounting, range 0...100%	CRP24-B1	
Connecting cable 5 m, A+B: RJ12 6/6, To ZTH/ZIP-USB-MP	ZK1-GEN	
Connection cable 5 m, A: RJ11 6/4, B: Free wire end, To ZTH/ZIP-USB-MP	ZK2-GEN	
<b>Mechanical accessories</b>	<b>Description</b>	<b>Type</b>
Actuator arm, for one-sided spindle clamp K-ENSA	AH-25	
Shaft extension 250 mm, for damper spindles Ø 8...25 mm	AV8-25	
Spindle clamp, one side for NM..A, SM..A	K-ENSA	
Straight ball joint with M8, suitable for damper crank arms KH8	KG10A	
Angled ball joint with M8, suitable for damper crank arms KH8	KG8	
Damper crank arm, for damper spindles	KH8	
Spindle clamp, reversible for SM..A and NMQ..	K-SA	

## Accessories

	Description	Type
	Universal mounting bracket 180 mm	Z-ARS180
	Angle of rotation limiter, for K-NA	20334-00001
	Form fit insert 10x10 mm, for NM..A / SM..A	ZF10-NSA
	Form fit insert 12x12 mm, for NM..A / SM..A	ZF12-NSA
	Form fit insert 15x15 mm	ZF15-NSA
	Form fit insert 16x16 mm, for NM..A / SM..A	ZF16-NSA
	Mounting kit for linkage operation, NM..A for flat installation	ZG-NMA
	Position indication for LM..A, NM..A, SM..A, GM..A	Z-PI
Service Tools	Description	Type
	Service Tool, for MF/MP/Modbus/LonWorks actuators and VAV-Controller	ZTH EU
	Belimo PC-Tool, software for adjustments and diagnostics	MFT-P
	Adapter to Service-Tool ZTH	MFT-C

## Electrical installation




## Notes

- Connection via safety isolating transformer.
- Parallel connection of other actuators possible. Observe the performance data.


## Wiring diagrams

AC/DC 24 V, modulating

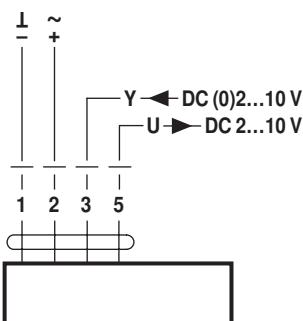

Cable colours:  
 1 = black  
 2 = red  
 3 = white  
 5 = orange

## Signal cable lengths

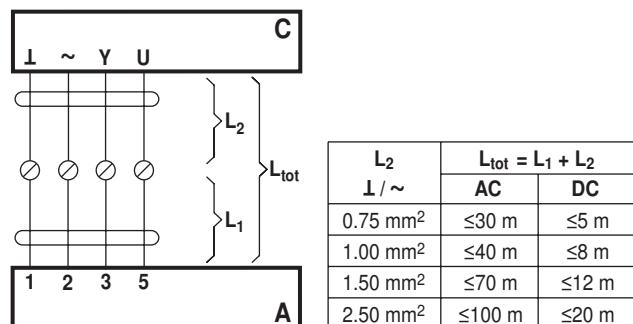


A = actuator  
 C = control unit  
 L1 = actuator connecting cable  
 L2 = customer cable  
 Ltot = maximum signal cable length

## Note:

In the event of several actuators switched in parallel, the maximum signal cable length is to be divided by the number of actuators.

L <sub>2</sub> L / ~	L <sub>tot</sub> = L <sub>1</sub> + L <sub>2</sub>	
	AC	DC
0.75 mm <sup>2</sup>	≤30 m	≤5 m
1.00 mm <sup>2</sup>	≤40 m	≤8 m
1.50 mm <sup>2</sup>	≤70 m	≤12 m
2.50 mm <sup>2</sup>	≤100 m	≤20 m

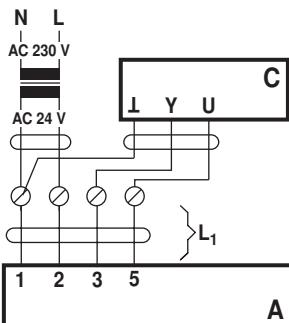
**Electrical installation**

A = actuator  
C = control unit  
L1 = actuator connecting cable


**Note:**  
If supply and data line are handled separately, then no special limitations apply for the installation.

**Functions****Functions with basic values (conventional mode)**


Override control with AC 24 V with relay contacts

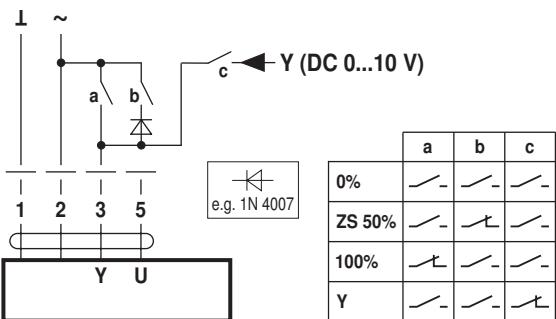



Override control with AC 24 V with rotary switch

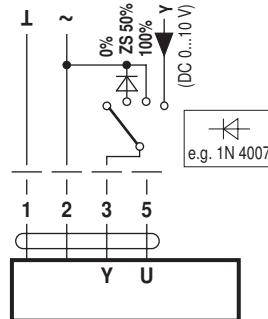


Remote control 0...100% with positioner SG..

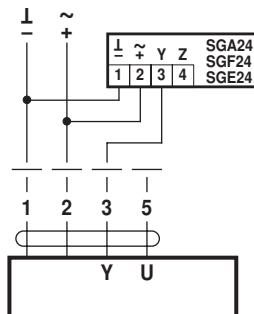


Minimum limit with positioner SG..

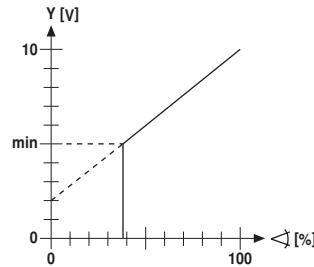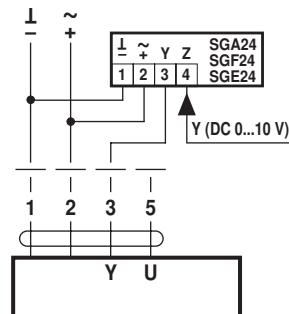

Follow-up control (position-dependent)

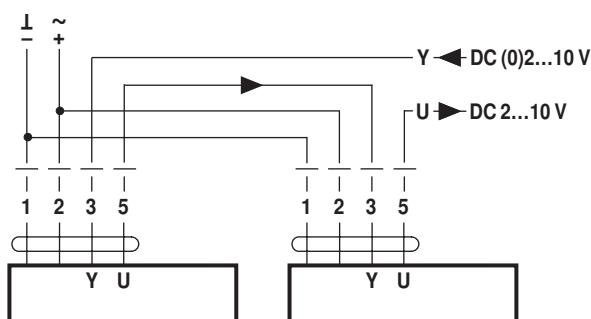


Position indication

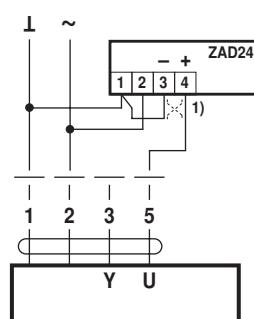

(1) Adapting the direction of rotation


**Functions**

Control with 4...20 mA via external resistor

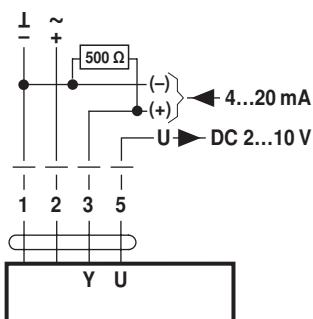**Caution:**

The operating range must be set to DC 2...10 V.  
The 500  $\Omega$  resistor converts the 4...20 mA current signal to a voltage signal DC 2...10 V


Functional check

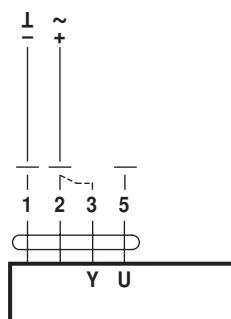**Procedure**

1. Connect 24V to connections 1 and 2
2. Disconnect connection 3:
  - with direction of rotation 0:  
Actuator rotates to the left
  - with direction of rotation 1:  
Actuator rotates to the right
3. Short-circuit connections 2 and 3:  
– Actuator runs in opposite direction

**Functions for actuators with specific parameters (Parametrisation with PC-Tool necessary)**


Override control and limiting with AC 24 V with relay contacts

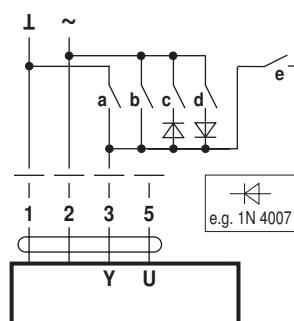

	a	b	c	d	e
Close <sup>1)</sup>	/	/	/	/	/
MIN	/	/	/	/	/
ZS	/	/	/	/	/
MAX	/	/	/	/	/
Open	/	/	/	/	/
Y	/	/	/	/	/


e.g. 1N 4007

Override control and limiting with AC 24 V with rotary switch

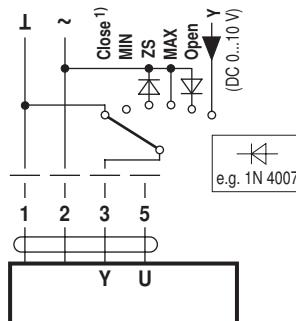


1) **Caution:** This function is only guaranteed if the start point of the operating range is defined as min. 0.5 V.

Control open-close

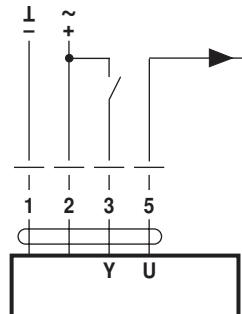

## Operating controls and indicators

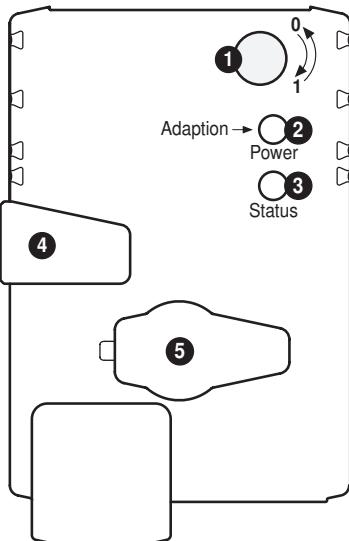**1 Direction of rotation switch**

Switch over: Direction of rotation changes

**2 Push-button and LED display green**

Off: No power supply or malfunction

On: In operation

Press button: Triggers angle of rotation adaptation, followed by standard mode

**3 Push-button and LED display yellow**

Off: Standard mode

On: Adaptation or synchronising process active

Press button: No function

**4 Gear disengagement button**

Press button: Gear disengages, motor stops, manual override possible

Release button: Gear engages, synchronisation starts, followed by standard mode

**5 Service plug**

For connecting parameterisation and service tools

## Check power supply connection

**2 Off and 3 On** Possible wiring error in power supply

## Installation notes

**Application with transverse forces** max. 50% of the torque (Caution: Application possible only with restrictions. Please contact your supplier.)


## Service




## Notes

- The actuator can be parameterised by PC-Tool and ZTH EU via the service socket.

## ZTH EU connection

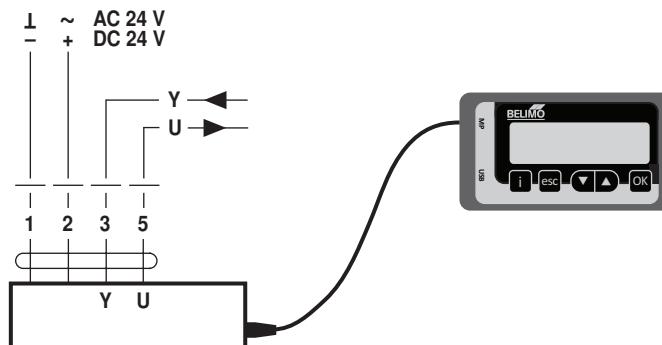

## PC-Tool connection

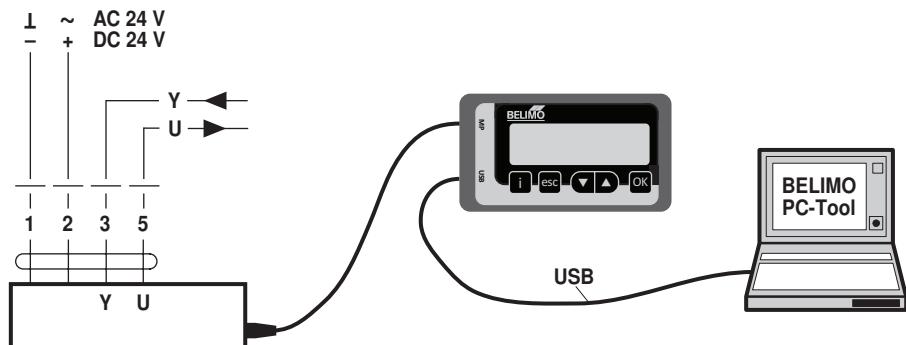


## Dimensions [mm]

## Spindle length

	Min. 42
	Min. 20

## Dimensional drawings

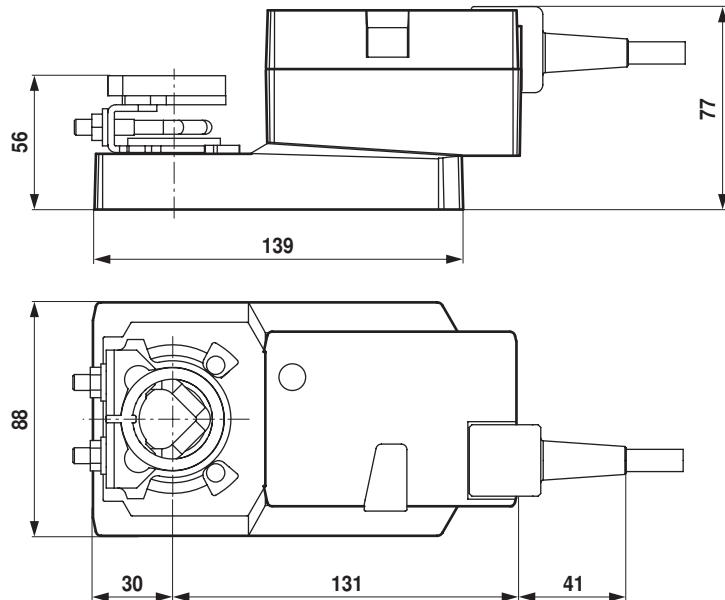

\*Option: Spindle clamp mounted below  
(accessories K-SA needed)

\*Option: Spindle clamp mounted below: When  
an auxiliary switch or a feedback potentiometer  
is used the adapter Z-SPA is required.